




## Single Group Transmitter (14 channels)

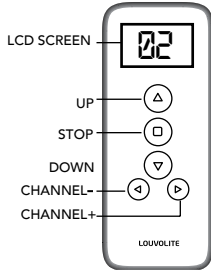

## Multi-Group Transmitter (3 x 14 channels)

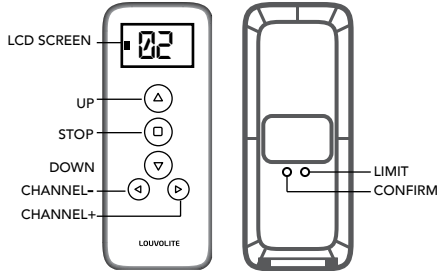


## LCD Screen Illustration

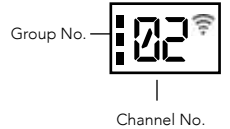


Remote is for use for up to 42 blinds.

## For Single Group Setting


 
To select Number of Channels (if less than 14)



 Step 1. Press and hold both up & down buttons for 3 seconds until 00 Channel displays. Release the buttons and the 00 will start to flash.





 
 
Step 2. Press the up or down button to select the required number of channels (between 1 - 14).



Step 3. Press and hold Channel + and Channel - at the same time for 3 seconds to confirm selection, No 01 will appear.

## Switching between Single Group & Multi-Group

 
Press and hold UP & DOWN button then press and hold LIMIT for 5 seconds. Group number will display for Multi-Group.

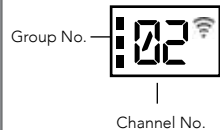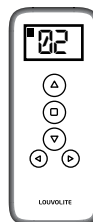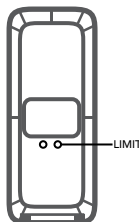


## Multi-Group Setting

### Two-Group Setting


 
Repeat steps 1 & 2 for Group 1 Channel Selection. Skip step 3.



 4. Press **Channel +** to enter second group number of channels.



 5. Press the **UP** or **DOWN** button to select the required number of channels (between 1-14)

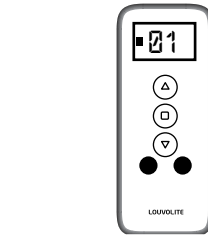

6. If you only need 2 groups press and hold Channel + and Channel - at the same time for 3 seconds to confirm selection. To set 3 groups repeat steps 4 & 5 and then press and hold Channel + and Channel - at the same time for 3 seconds to confirm selection.

---