

Fitting Instructions

for YewdaleDefiant® cassettesblinds
(C40s)


Fitting Instructions
for YewdaleDefiant® cassettedblinds
(C40s)


Fitting Instructions

YewdaleDefiant® cassetted blinds (C40s)

Safety Instructions:

1. Loops in pull cords, chains, tapes and inner cords that operate the product can cause strangulation
2. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck
3. Move beds, cots and furniture away from window covering cords
4. Do not tie cords together. Make sure cords do not twist and create a loop

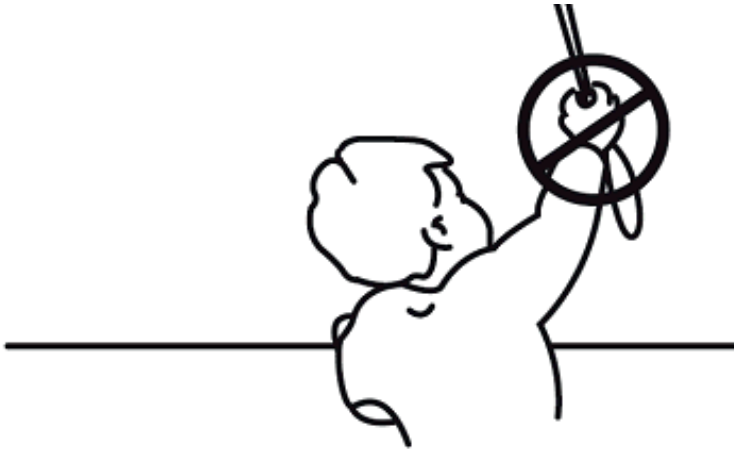

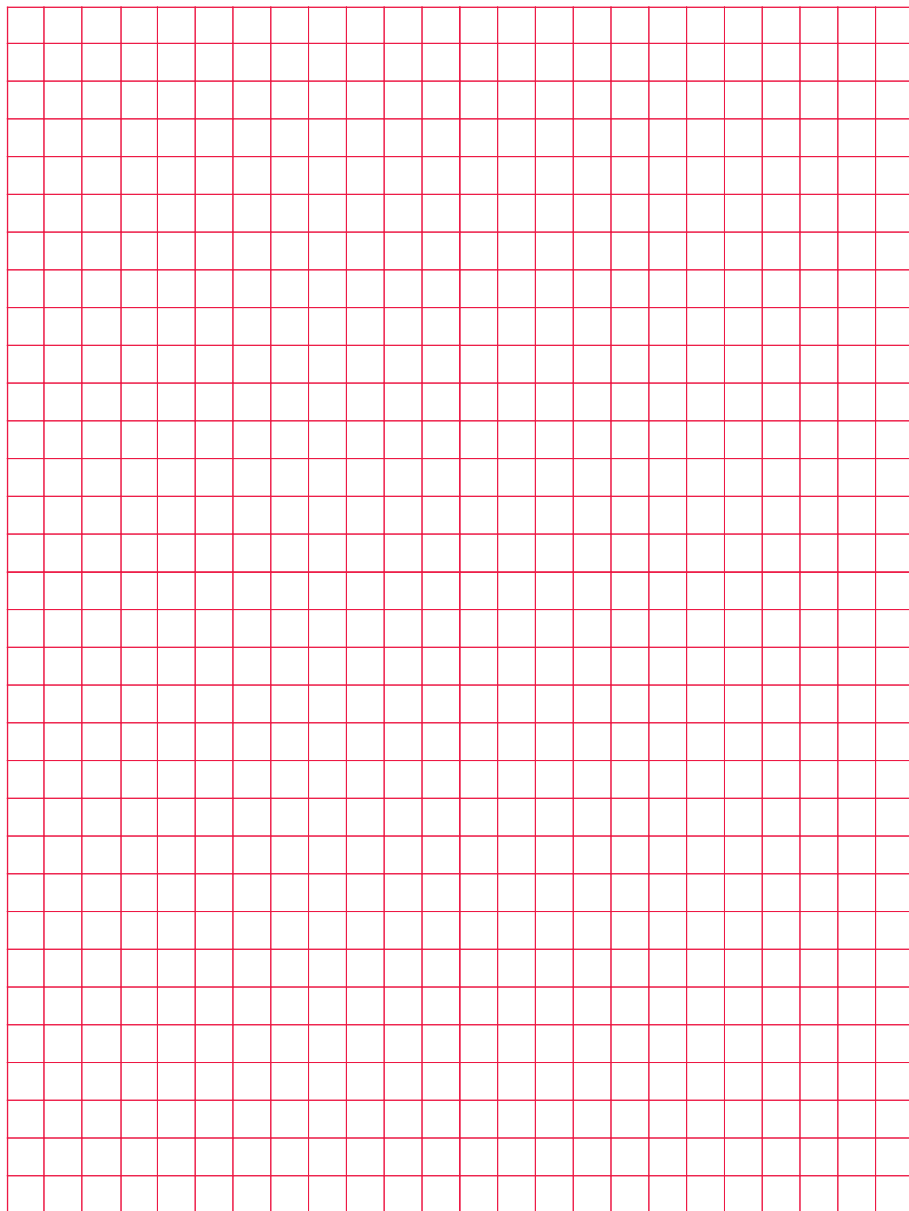


Fitting Instructions

YewdaleDefiant® cassetted blinds (C40s)

Cassetted blinds with side channels:

1. Remove the two safety screws in the underside of the headbox to enable the cover to open (if the blind is a sidewinder, also unscrew the chain guide).
2. Using the indents (see figure below) within the headbox, drill 3.8mm fixing holes either in the top or back depending on whether it is required to be face or recess fixed. Fixing holes should be equally spaced and no more than 1m apart to ensure head box is fixed completely level.

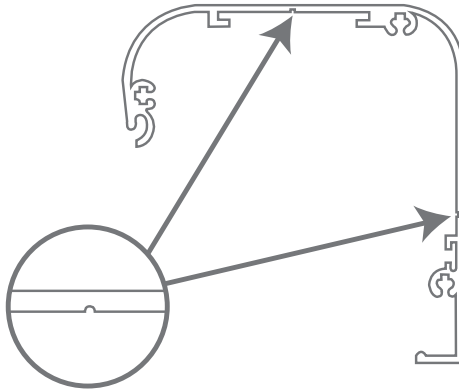

3. Lift the headbox into place and, if fitting to steel or concrete, mark with a marker where holes need to be drilled so the hole can be plugged. Drill the holes and lift the headbox into place and fix using the appropriate screws. If timber, simply fix the headbox in place using the appropriate screws.

NB. To operate correctly, the blind MUST be fixed level.

4. Insert the barrel and fabric into the headbox. If the blind is spring controlled, go to point 5. If it is sidewinder controlled, go to point 7. If it is crank controlled, go to point 9. If it is electrically controlled, go to point 10 and refer to the motor instructions for setting limit stops.
5. Insert/click the blind on the back bar into the headbox. The spring must be on the right-hand side unless the fabric is reverse rolled.



6. The spring would have been tensioned during manufacturing but the tension can be increased or decreased if required. If the fabric does not wind up completely when the blind is operated, greater spring tension can be applied as follows:
 - a) Remove the blind and the back bar from the headbox.
 - b) Use a flat head screwdriver through the hole in the bracket at the spring end to either increase or decrease the tension as desired.
 - c) Insert the barrel and fabric back into the headbox.
 - d) Attach the pull cord onto the bottom bar.
7. Fix the chain guide into position by threading the chain through the chain guide making sure the chain is not twisted.
8. Re-attach the chain guide using the screws provided.
9. Insert the barrel and fabric into the headbox.
10. Drill an exit hole for the electric cable and insert the fabric and barrel into the headbox, making sure the supply cable is carefully threaded through.
11. For motor programming instructions, please refer to the enclosed leaflet.

Fitting Instructions

YewdaleDefiant® cassetted blinds (C40s)


Instructions for Standard Face Fix Side Channels:

N.B It is important that the blind is in the headbox with the blind fully retracted when the side channels are being installed.

1. Fix the bottom angle making sure it is directly in line with the headbox.


N.B It is important that the back of the side channel ends up directly in line with the back of the headbox.

2. The face-fixing side channel must be fixed by drilling 5mm fixing holes at maximum 600mm centres, with 10mm access holes in the front as shown below:

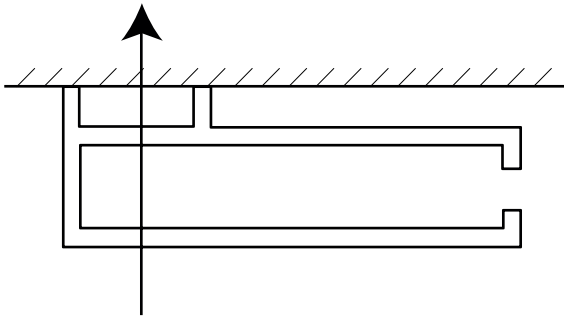

N.B Side channels must be fixed square. Check by measuring diagonals.

3. Run the blind up and down and close access holes with grommets supplied when you're confident that the blind operates correctly.
4. Attach the cover onto the headbox by inserting the cover into the headbox groove. Swing to the closed position and apply and upward pressure to click the cover into its home position.
5. Fix the cover using the two safety screws provided.
6. Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BSEN16433:2014 and BSEN16434:2014.

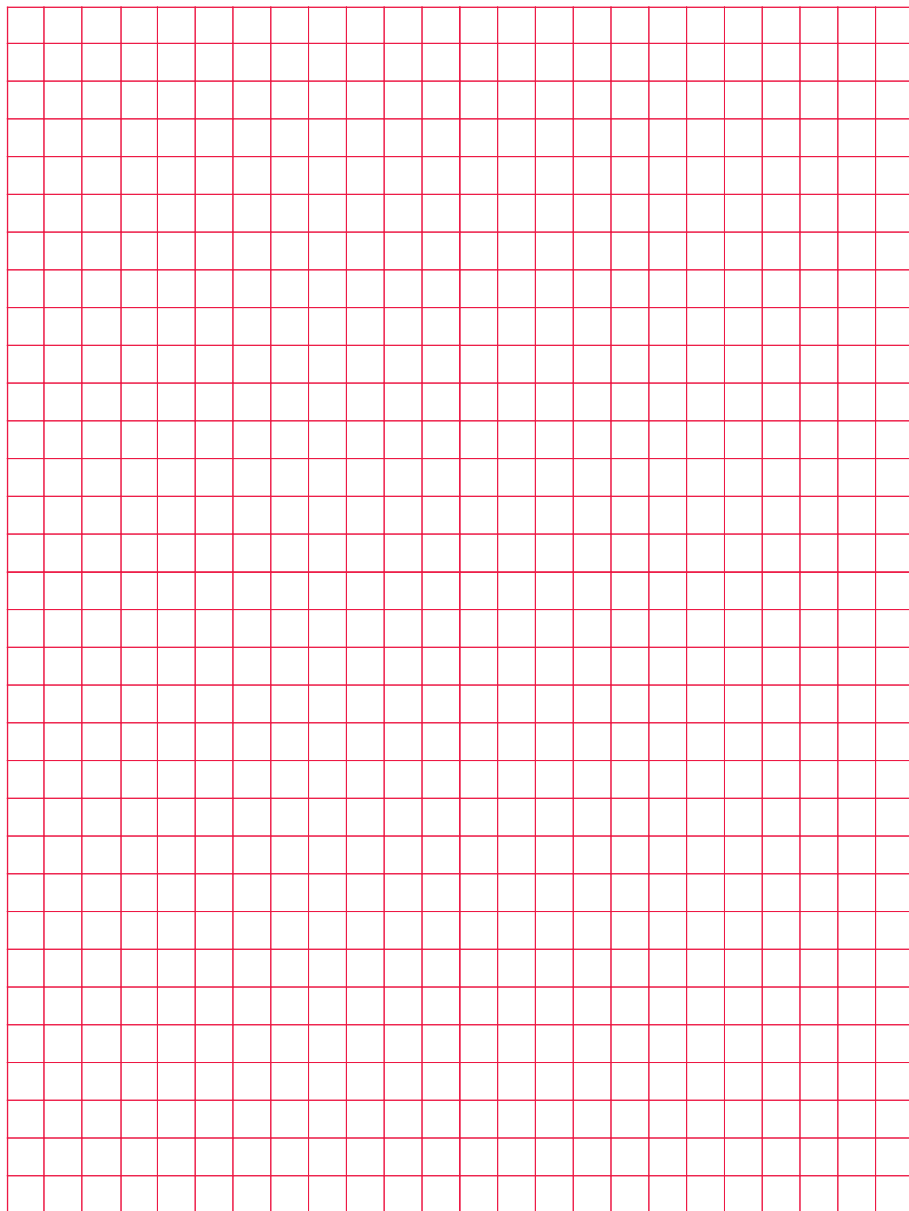

Fitting Instructions

YewdaleDefiant® cassetted blinds (C40s)

Instructions for Standard Recess Fix Side Channels:

N.B It is important that the blind is in the headbox with the blind fully retracted when the side channels are being installed.

1. Fix the bottom angle (if required) making sure it is directly in line with the headbox.


N.B It is important that the back of the side channel ends up directly in line with the back of the headbox.

2. The recess fix side channel must be fixed by drilling 5mm fixing holes at maximum 600mm centres, making sure the flange is at the rear.
3. Run the blind up and down and close the access holes with the grommets supplied when you're confident the blind operates correctly.
4. Attach the cover onto the headbox by inserting the cover into the headbox groove. Swing to the closed position and apply an upward pressure to click the cover into its home position.
5. Fix the cover using the two safety screws previously removed.

N.B Side channels must be fixed square. Check by measuring diagonals.

6. If the blind is spring operated, attach the knot holder to the bottom bar (along with pull cord and acorn). Attach the cleat to the cill to hold the blind in the 'Down' position.
7. Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BSEN16433:2014 and BSEN16434:2014.

N.B It is important that the blind is in the headbox with the blind fully retracted when the side channels are being installed.

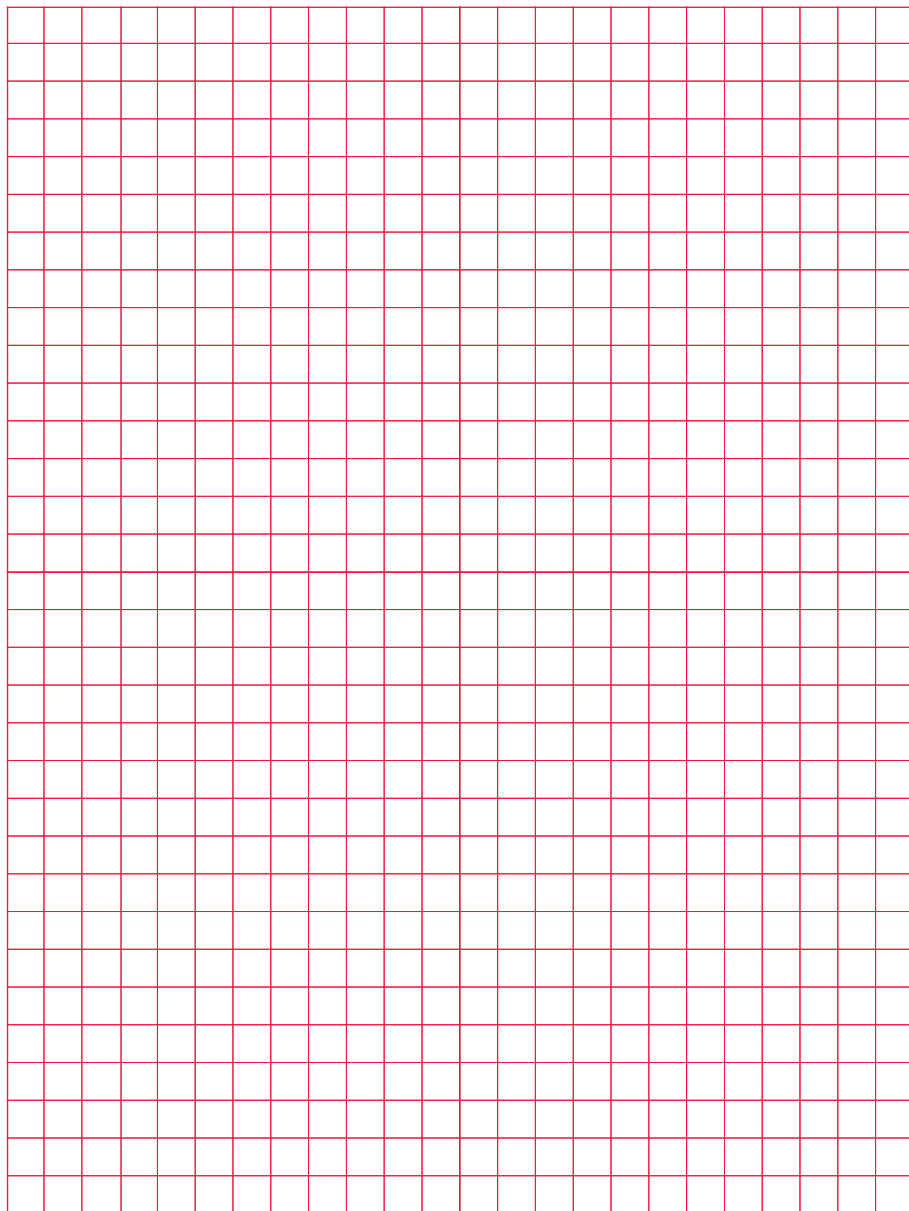


Fitting Instructions

YewdaleDefiant® cassetted blinds (C40s)

Instructions for Tracker Side Channels:

1. Ensure that the blind is in the head box and that it is fully retracted before the side channels are installed.
2. Fix the bottom angle (if required) making sure it is directly in line with the back and end of the head box.
3. Using the indent provided, fit the side channel by drilling 5mm fixing holes at maximum 600mm centres, with 10mm access holes in the front as shown:

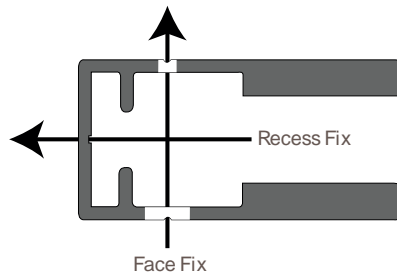


4. Ensure the back of the side channel lines up directly with the back of the head box and not fitted past it. Make sure that the side of the side channels extend no further than the side of the head box or causes an overhang of the head box. The side channel and head box back and side must be absolutely flush with each other. If it is fitted out-of-line the blind will not lower easily due to the fabric being stretched too far. Please see images below for further guidance.



5. Use packers if necessary to ensure the side channels remain lined up correctly and level all the way down.

6. Check that the side channels are fixed square by measuring diagonals.
7. Feed the PVCinsert up into the side channel (with the fluted end towards the head box) making sure the zip locates within the insert.
8. Insert the PVCinsert removal tool into the PVCinsert (approx. 20mm from the bottom).

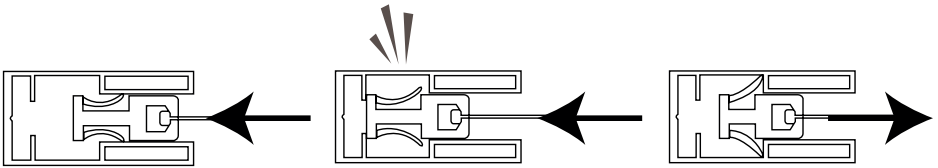

9. Run the blind up and down making sure the blind operates correctly. If more or less tension is required on the fabric, follow the process below. If tension is correct, go to point 13.
10. Twist insert the tool by 90 degrees and pull the PVCinsert out of the side channel being careful not to disturb any fixings. When the PVCfins are visible, simply remove the insert from the side channel using your hand.

PVCinsert removal tool: Part Number 930006.



11. Undo the fixings and refit where required and repeat process 7 - 9.
12. Close access holes with the grommets supplied when you're confident blind operates correctly.
13. Attach the cover onto the head box by inserting the cover into the head box groove. Swing to the closed position and apply an upward pressure to click the cover into its home position.
14. Fix cover using the two safety screws previously removed.
15. Ensure the relevant child safety device is used to comply with BS EN13120:2009+A1:2014, BSEN16433:2014 and BSEN16434:2014.