




Remote Control Set Up Instructions

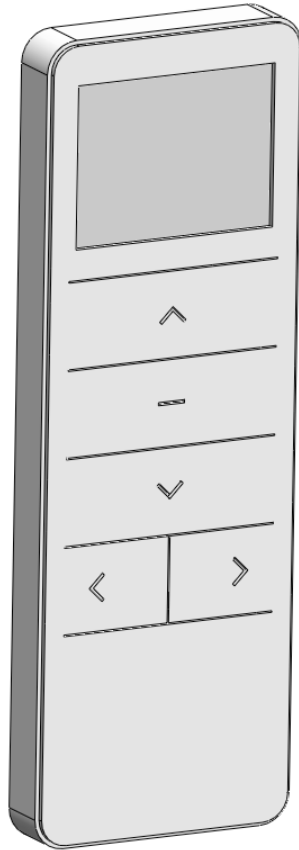

Specification	
Voltage	3V (CR2450)
Frequency	433.92MHz
Operating Temperatures	-10C ~ + 50C
Transmission Distance	Up to 35m indoors
Dimensions	45x130x11.5mm

Features
Fifteen Channels
LCD Display
Slimline Wall Mount Option

Contents
1 x Remote Control
1 x Wall mount holder and fixings
1 x Instruction manual
1 x Battery

Safety Instructions

WARNING: Safety instructions must be read prior to installation. Failure to adhere to the installation instructions may result in incorrect installation or injury and will void manufacturer's liability and warranty.


- Do not expose to water, wet or humid conditions or extreme temperatures.
- Persons and children with reduced physical, sensory or mental capabilities should not use this product unless supervised.
- Do not tamper with or modify this product in any way. This will void its warranty.
- Keep away from children.
- Regularly inspect the product to ensure it is working correctly. Do not use if damaged.
- Keep clear when product is in use.
- Replace battery with specified battery type only.
- To be used with Bloc iQ products only.






Installation Wall Mount Holder

Remove mount cover from base by prying it open with a flat head screwdriver.

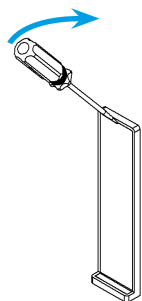


Use fixings provided to secure base to wall and then replace cover.

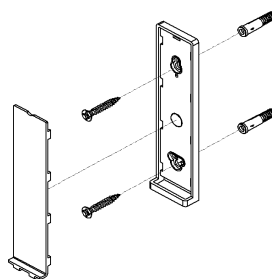


Installation Battery

 
Remove remote cover by gently pressing inwards and sliding down.



Insert battery with positive (+) side facing outwards.

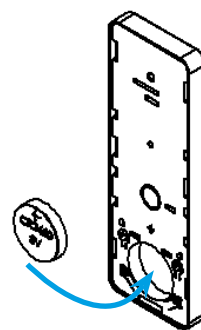


Buttons

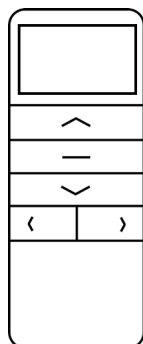

Up
Stop
Down
Channel


Group Control

Channel 0 is pre-set to control all blinds paired to your multi-channel remote control.

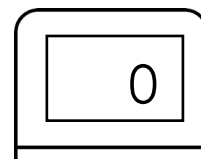

Adding blinds to a Remote Control Channel


Choose a channel.

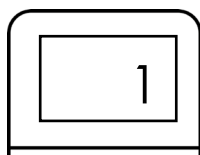

NB. the ariel end can be used to press the **P1** button.

Using Motor **P1** Button


Hold **P1** button on motor head

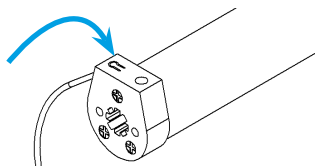

Motor Response

Approx. 2secs jog x1
 beep x1

Hold **STOP** on Remote Control to add channel.

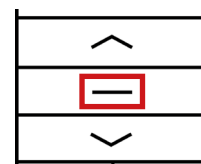


Motor Response

Approx. 2secs jog x2
 beep x3




Setting Limits Setting upper limit

Press **Up** to move blind to the desired highest position.

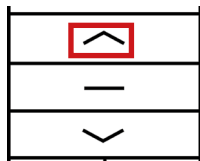

Hold **Up** and **Stop** to save upper limit.

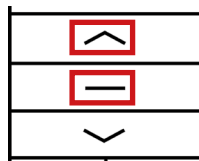


Motor Response

Approx. 5 secs jog x2
beep x3


NB. Quick press = step motion
Long press = continuous motion

Setting Limits Setting lower limit

Hold **Down** to move blind to the desired lowest position.

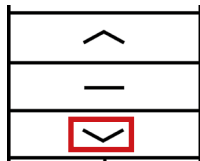

Hold **Down** and **Stop** to save lower limit.

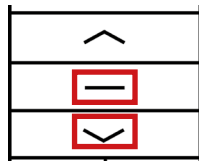




Motor Response

Approx. 5 secs jog x2
beep x3

NB. Quick press = step motion
Long press = continuous motion

Favourite Positioning Setting a favourite position

Move blind to the desired position by pressing the **UP** or **DOWN** button on the Remote Control.

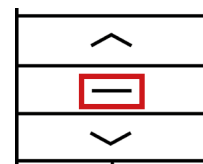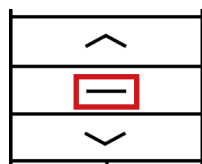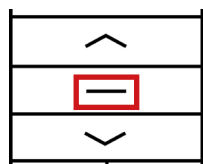

Motor Response

jog x1
beep x1

Motor Response

jog x1
beep x1

Motor Response

jog x2
beep x3

Approx.

4 secs










Nb. Favourite position must be set in Zebra Blind to set fabric open band position.

You have now completed initial set up. For troubleshooting please follow the steps as detailed in the Troubleshooting section.
If you have purchased the smart enabled Bloc iQ bridge please refer to the set up instructions enclosed within the bridge box.

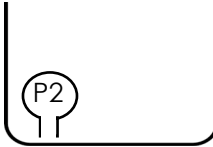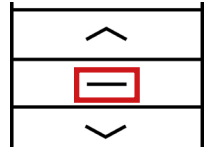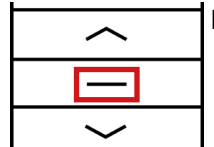To replace a fabric in your Smart enabled blind please refer to the online guide.

TROUBLESHOOTING


Deleting a Favourite Position

 <p>Press P2</p>	 <p>Press STOP</p>	 <p>Press STOP</p>
Motor Response	Motor Response	Motor Response
 jog x1  beep x1	 jog x1  beep x1	 jog x2  long beep x1










Adjusting Limits Adjusting upper limit

<p>Hold Up and Stop on Remote Control.</p> 	<p>Motor Response</p> <p>Approx.  5 secs</p>  jog x2  long beep x1	<p>Move blind to desired location then hold Up and Stop to save location.</p> 
--	---	---

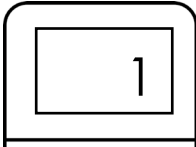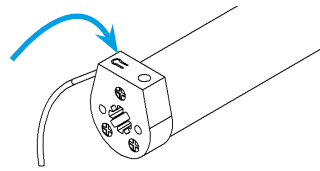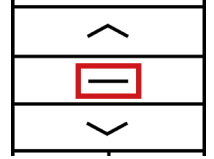Adjusting Limits Adjusting lower limit

<p>Hold Down and Stop on Remote Control.</p> 	<p>Motor Response</p> <p>Approx.  5 secs</p>  jog x2  long beep x1	<p>Move blind to desired location then hold Down and Stop to save location.</p> 
--	---	---

Removing blinds from a Remote Control Channel if limits are set

<p>Choose a channel.</p> 	<p>Using Motor P1 Button</p> <p>Hold P1 button on motor head</p> 	<p>Hold STOP on Remote Control to remove channel.</p> 
<p>NB. the ariel end can be used to press the P1 button.</p>	<p>Motor Response</p> <p>Approx.  2 secs  jog x1  beep x1</p>	<p>Motor Response</p> <p>Approx.  2 secs  jog x2  beep x3</p>
<p>If limits are not set please hold Motor P1 button for 14 secs, release after 4 jogs resulting in 4 beeps and restores to factory settings.</p>		

Motor Issues

Problem	Cause	Solution
Motor not responding	Remote battery is discharged	Replace battery
	Battery is inserted incorrectly	Check battery polarity
	Radio interference	Ensure remote is positioned away from metal objects and that aerial on motor or receiver is kept straight and away from metal
	Blind distance is too far from remote control	Move remote closer to receiver
	Blind battery is running low (continuous beeping after last use)	Charge blinds using your AC adaptor plug

To restore to factory settings hold P1 button for approx. 14 sec. Blind will jog x 4 and beep x 4 after final jog.

For any further advice on setting up your Remote Control please contact our Customer Service Department on t: 028 796 44922 | e: info@blocblinds.com