

BlocOut Fitting Options All Blinds Are Spring Operated


There are 2 Options to choose from depending upon your window.

Option 1 EDGE FIT



Measurements are taken at the front edge of the opening wall to wall.
Blind will be fitted flush with the wall.
This option may leave your window sill free if you have enough space for objects.

RECESS FIT With Batons Option 2- If You Prefer To Fit In the Recess-

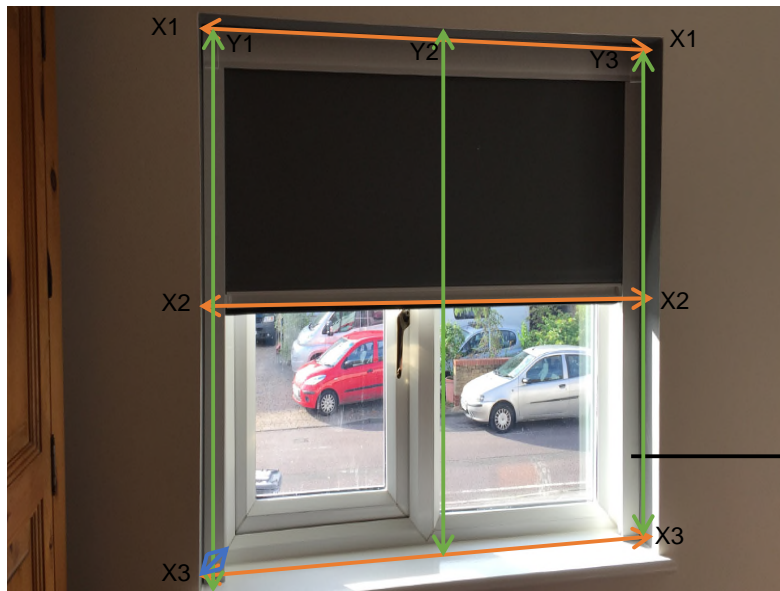

Measure where you wish to fit

Widths X1 across top, X2 across middle
X3 along the window sill



Drops- Y1 Left hand drop, Y2 middle drop
Y3 right hand drop




Z = Depth must be 50 mm clear of any handles
or obstructions.

Blind fitted in the recess/ reveal of the window



Choose this option if you have a dormer window – Measure where you wish to fit

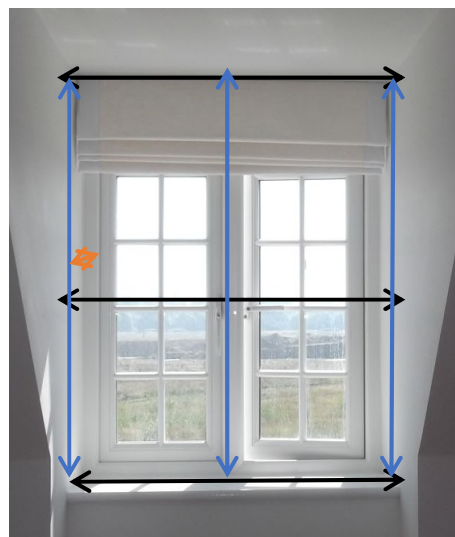

X= Widths across top, middle and
bottom



Y = Drops Left hand, Middle and
right hand drop



Z= Depth Must be 50mm clear of any
handles or obstructions